

**Products:** [EC](#) [1]

**Topics:** [FAQs](#)

The EC controller uses a numbered seven-day calendar to schedule the days to water. The display will show the days of the week as numbers 1–7.

When programming the current time and day, you can select a number to represent the current day of the week. The number can be changed to represent the user's preference. Many people think of Sunday as day 1 while others think of Monday as day 1. The day number can be set to whatever works best for you.

Once you determine what the current day is, you can use that information to select the days you want to water. For example, if today is Wednesday and the current day is 3, then Monday would be day 1. If you would like for the controller to water on Tuesdays and Thursdays, you'll select days 2 and 4 as water days.

## Setting the Date and Time

1. Turn the dial to the CURRENT TIME/DAY position.
2. Hours will be flashing. Press the  or  button to change the hour shown on the display. Press the  to proceed to setting the minutes.
3. Minutes will be flashing. Use the  or  button to change the minutes shown on the display. Press the  to proceed to select AM, PM, or 24 hour time.
4. The time will be displayed, press the  to select AM, PM, or 24 hour when the option is blinking. Press the  again to proceed to setting the day of the week.
5. The number one will be flashing indicating the first day of the week. Press the  or  button to select a number that corresponds with today. The time and day have now been set.




## Setting Days to Water

1. Turn the dial to the WATER DAYS position.
2. The display will show the last program selected (A, B or C). You can switch to another program by pressing the  button.
3. The number 1 will be flashing, this represents the first day of the week. A  icon or a  icon above the numbered day. The  icon represents a scheduled water day, while a  icon represents a non-water day.
4. Press the  button to designate the flashing day as a water day or press the  button to designate it as a non-water day. Do this for every day of the week.
5. After programming is complete, turn the dial to the **AUTOMATIC** position. This will enable automatic operation for all programs that contain a PROGRAM START TIME, STATION RUN TIME and a DAY TO WATER.



## Resources

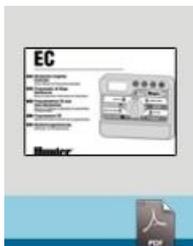

[2]  
[EC OWNER'S MANUAL](#)

**Rate this Article:**



Average: 3 (1 vote)

## Related Links

---

**Source URL (retrieved on 04/08/2015 - 05:50):** <http://www.hunterindustries.com/en-metric/support/how-do-i-program-days-water-my-hunter-ec-controller?source=lang&from=en&to=en-gb>

### Links:

- [1] <http://www.hunterindustries.com/en-metric/irrigation-product/discontinued-models/ec>
- [2] [http://www.hunterindustries.com/sites/default/files/OM\\_EC\\_EM.pdf](http://www.hunterindustries.com/sites/default/files/OM_EC_EM.pdf)
- [3] [http://www.hunterindustries.com/sites/default/files/OM\\_EC\\_DOM.pdf](http://www.hunterindustries.com/sites/default/files/OM_EC_DOM.pdf)
- [4] [http://www.hunterindustries.com/sites/default/files/OM\\_EC\\_SP.pdf](http://www.hunterindustries.com/sites/default/files/OM_EC_SP.pdf)
- [5] [http://www.hunterindustries.com/sites/default/files/OM\\_EC\\_IT.pdf](http://www.hunterindustries.com/sites/default/files/OM_EC_IT.pdf)
- [6] [http://www.hunterindustries.com/sites/default/files/OM\\_EC\\_FR.PDF](http://www.hunterindustries.com/sites/default/files/OM_EC_FR.PDF)
- [7] [http://www.hunterindustries.com/sites/default/files/OM\\_EC\\_PT.pdf](http://www.hunterindustries.com/sites/default/files/OM_EC_PT.pdf)
- [8] [http://www.hunterindustries.com/sites/default/files/OM\\_EC\\_GR.pdf](http://www.hunterindustries.com/sites/default/files/OM_EC_GR.pdf)
- [9] <http://www.hunterindustries.com/en-metric/global>