

Products: I-Core® [1]

Topics: FAQs, Installation Procedures, Troubleshooting

Steps to replace the front panel on a I-Core controller:

STEP ONE



Turn controller power off!

STEP TWO



With the controller's power off, open the face panel's door (similar to how the front door of the controller was opened).

STEP THREE



Once the front panel's door is open, locate the grey ribbon cable in the top right corner on the back of the face panel.

STEP FOUR



Carefully unplug the ribbon cable by pulling out on the black plastic plug.

STEP FIVE



Press the tab release on the back of the face

STEP SIX



With the tab release pressed, the face panel

panel door to the left to release the panel from the frame. can be removed from the door frame. the frame.

STEP SEVEN



[8]

To install the new panel simply reverse this process.

Resources



[9]

[I-CORE OWNER'S MANUAL](#)

Rate this Article:



No votes yet

Related Links

Source URL (retrieved on 28/01/2015 - 06:15): <http://www.hunterindustries.com/en-metric/support/how-do-i-replace-front-panel-my-i-core-controller?source=lang&from=en&to=en-gb>

Links:

- [1] <http://www.hunterindustries.com/en-metric/irrigation-product/controllers/i-corer>
- [2] http://www.hunterindustries.com/sites/default/files/ts_icode_1.jpg
- [3] http://www.hunterindustries.com/sites/default/files/ts_icode_2.jpg
- [4] http://www.hunterindustries.com/sites/default/files/ts_icode_3.jpg
- [5] http://www.hunterindustries.com/sites/default/files/ts_icode_4.jpg
- [6] http://www.hunterindustries.com/sites/default/files/ts_icode_5.jpg
- [7] http://www.hunterindustries.com/sites/default/files/ts_icode_6.jpg
- [8] http://www.hunterindustries.com/sites/default/files/ts_icode_7.jpg
- [9] http://www.hunterindustries.com/sites/default/files/OM_ICORE_em.pdf
- [10] http://www.hunterindustries.com/sites/default/files/OM_ICORE_Dom.pdf
- [11] http://www.hunterindustries.com/sites/default/files/OM_ICore_SP.pdf
- [12] http://www.hunterindustries.com/sites/default/files/OM_ICore_IT.pdf
- [13] http://www.hunterindustries.com/sites/default/files/OM_ICore_FR.pdf
- [14] http://www.hunterindustries.com/sites/default/files/OM_ICore_PT.pdf
- [15] http://www.hunterindustries.com/sites/default/files/OM_ICore_GR.pdf
- [16] http://www.hunterindustries.com/sites/default/files/om_icode_tr.pdf
- [17] http://www.hunterindustries.com/sites/default/files/om_icode_po.pdf
- [18] <http://www.hunterindustries.com/en-metric/global>