

Products: SVC [1]

Topics: FAQs, Video

All Hunter controllers come equipped with a reset procedure and/or reset button. The reset procedure allows the user to clear electrical glitches and help restore factory settings.

1. Remove the 9-volt battery from the controller and wait 1 minute.
2. Press and hold down the **+** , **-** and **←** buttons.
3. Replace the 9 volt battery.
4. Release the **+** , **-** and **←** buttons.



[2]

Rate this Article:



Average: 2.8 (6 votes)

Related Links

Source URL (retrieved on 01/29/2015 - 14:58): <http://www.hunterindustries.com/support/how-do-i-reset-my-hunter-svc-controller>

Links:

[1] <http://www.hunterindustries.com/irrigation-product/discontinued-models/svc>

[2] http://www.hunterindustries.com/sites/default/files/ts_svc_svc400.jpg