




[Read Article](#)

[Watch Video](#)

[Node](#) [1]

Installation Procedures

1. Press the  button until the  icon is displayed.
2. The run time will be displayed flashing. Also shown is the program letter (A, B, or C) and the active station # on the lower left side of the display. Press the plus or minus button to change the station run time from 1 minute to 6 hours.
3. Press the right right arrow button to advance to the next station.
4. Press the PRG button to add a run time to another program.
5. Press the  button to proceed to the next programming function or allow controller to return to idle mode.



NOTE: After programming the run time for the last station press the **right arrow (>)** button to display the total run time for the program.

Rate this Article:



No votes yet

Source URL (retrieved on *03/06/2015 - 20:35*): <http://www.hunterindustries.com/support/node-setting-run-times>

Links:

[1] <http://www.hunterindustries.com/irrigation-product/controllers/node>

[2] <http://www.hunterindustries.com/videos/node-setting-program-start-times>

[3] <http://www.hunterindustries.com/javascript%3Awindow.history.back%28%29%3B>

[4] <http://www.hunterindustries.com/videos/search>

[5] http://subsite.hunterindustries.com/videos/mov/NODE_Program-start-times_converted.mov

[6] http://subsite.hunterindustries.com/videos/wmv/NODE_Program-start-times_converted.wmv