

**Products:** [X-Core](#) [1]

**Topics:** [FAQs](#), [Troubleshooting](#)

After programming the X-Core, set the dial to the RUN position to enable automatic execution of all selected watering programs and start times.

**Rate this Article:**



Average: 1 (1 vote)

## Related Links

---

Source URL (retrieved on *01/30/2015 - 11:16*): <http://www.hunterindustries.com/support/x-core-automatic-watering>

### Links:

[1] <http://www.hunterindustries.com/irrigation-product/controllers/x-core>