


**Products:** [X-Core](#) [1]

**Topics:** FAQs, Troubleshooting

Valves currently watering will be shut off after the dial is turned to the **SYSTEM OFF** position for two seconds. The display will be flashing OFF. All active programs are discontinued and watering is stopped. To return the controller to normal automatic operation, simply return the dial to the **RUN** position.

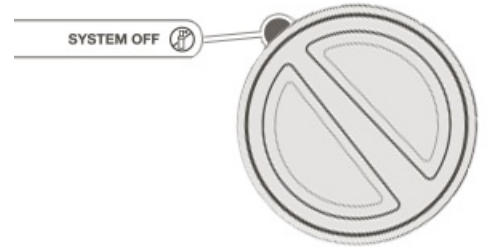

**Rate this Article:**



No votes yet

## Related Links

---

**Source URL (retrieved on 03/01/2015 - 09:29):** <http://www.hunterindustries.com/support/x-core-system>

**Links:**

[1] <http://www.hunterindustries.com/irrigation-product/controllers/x-core>