

IMMS-ANT2 / ACC

EN Installation in ACC

FR Instructions pour programmeurs ACC





ES Instrucciones para programadores ACC

DE Instruktionen fuer ACC Steuergeraete




IT Istruzioni per programmatori ACC

PT Instruções para Controladores ACC

TK ACC Kontrol Ünitesi için Kullanma Talimatları

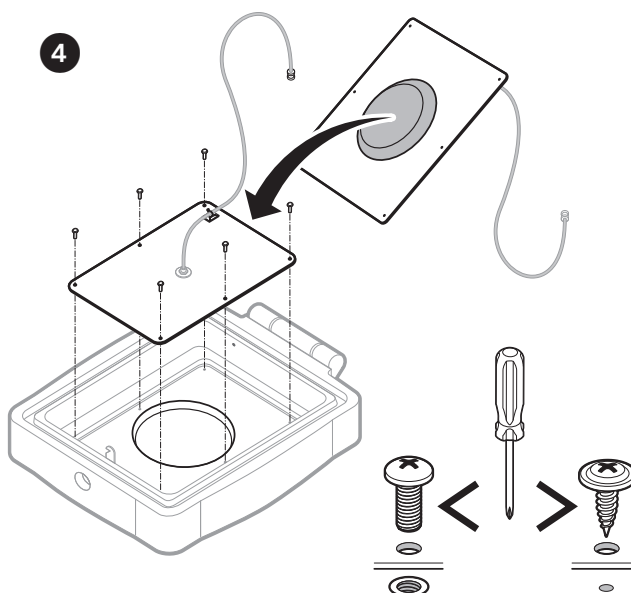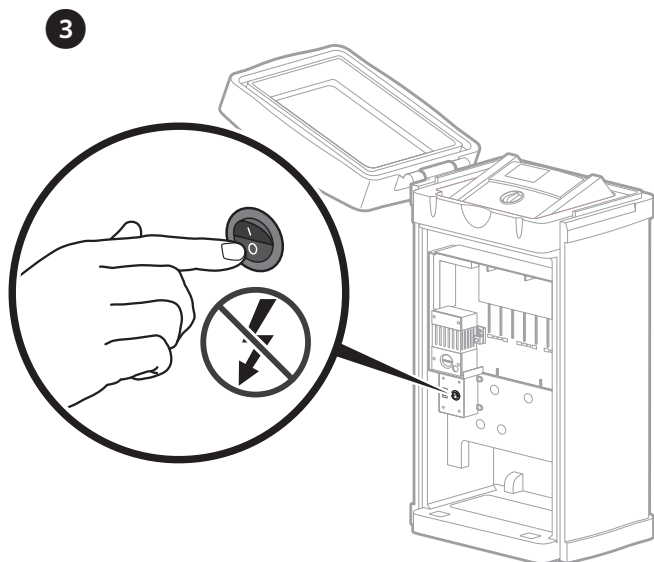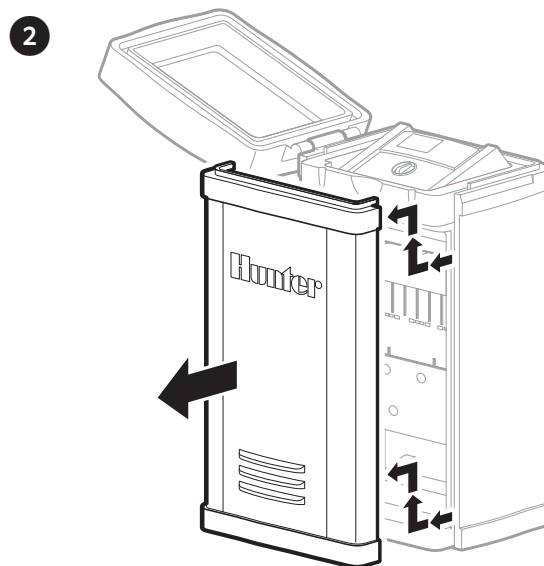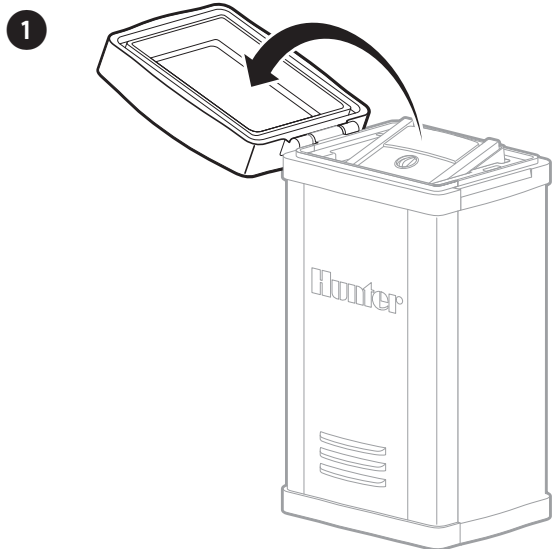

Hunter® | Built on Innovation

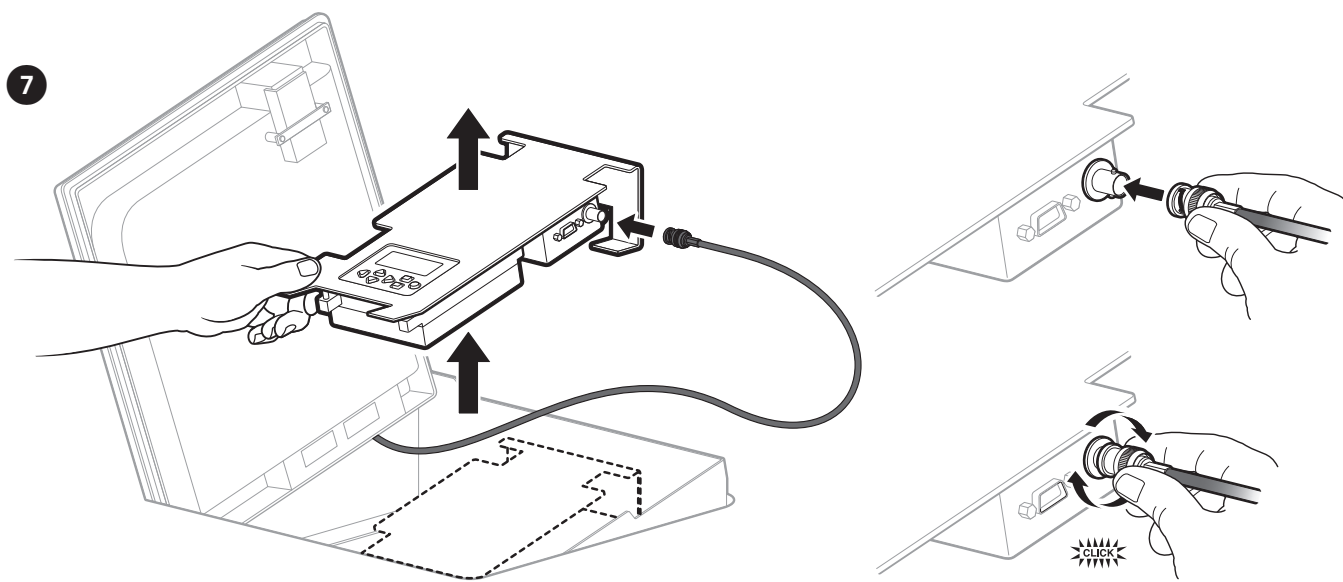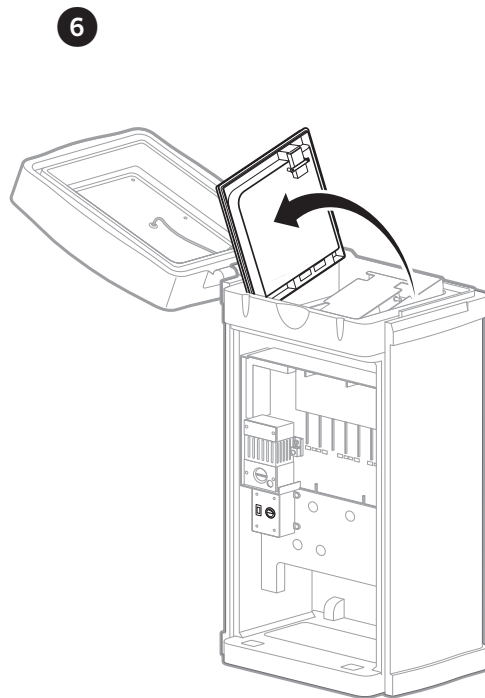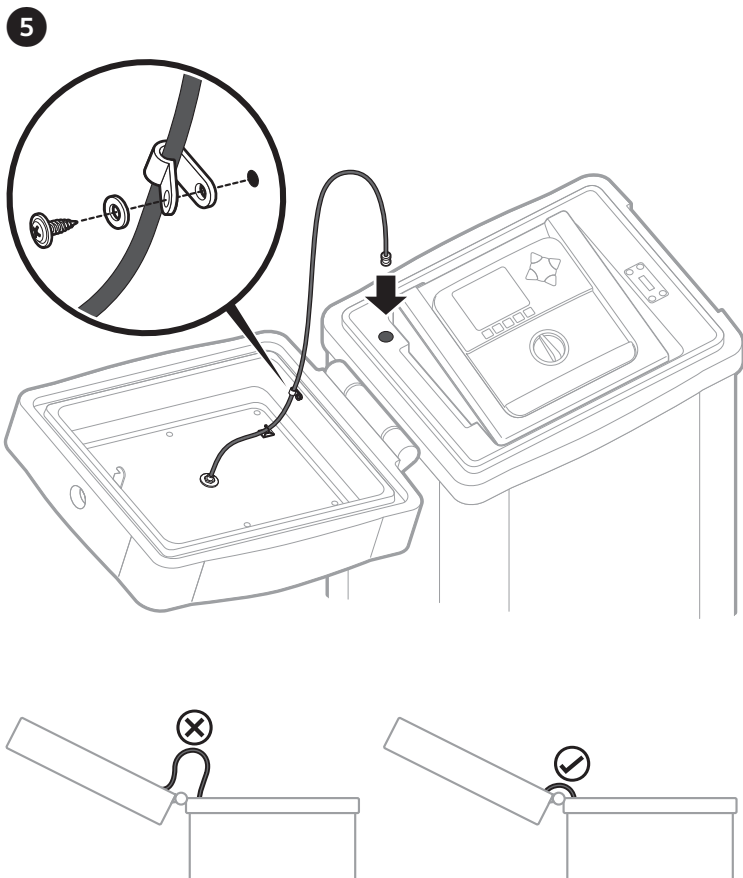

IMMS-ANT2 / PILOT

EN Installation in Pilot

FR Instructions pour programmeurs Pilot





ES Instrucciones para programadores Pilot

DE Instruktionen fuer Pilot Steuergeraete

IT Istruzioni per programmatori PILOT

PT Instruções para Controladores Pilot



TK Pilot Kontrol Ünitesi için Kullanma Talimatları

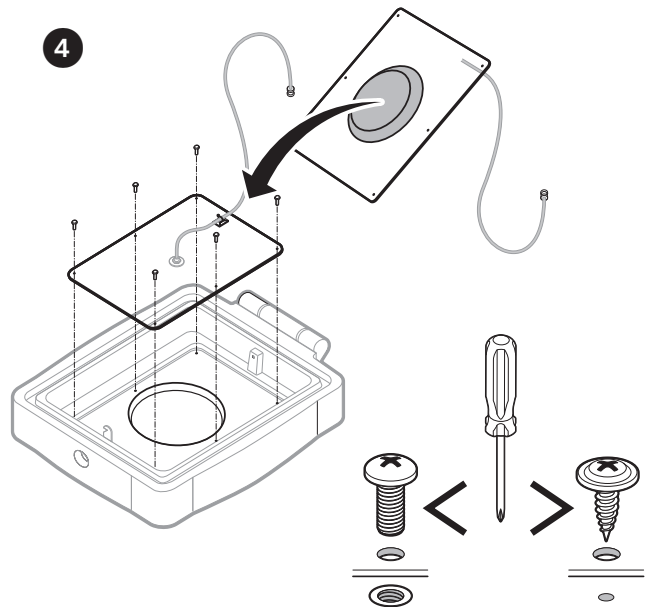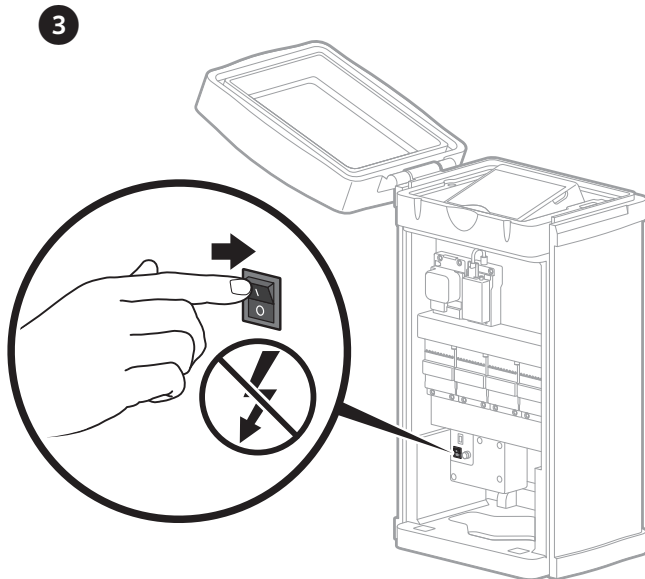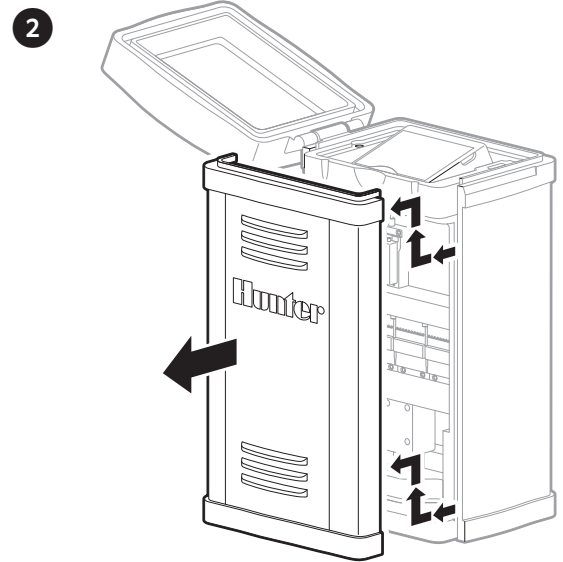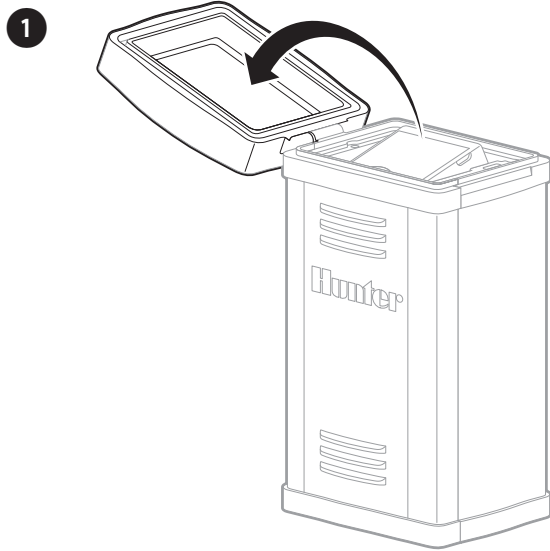

Hunter® | Built on Innovation

IMMS-ANT2 / PILOT

5

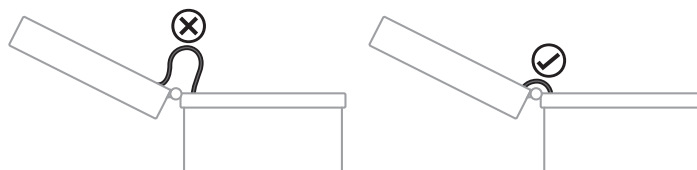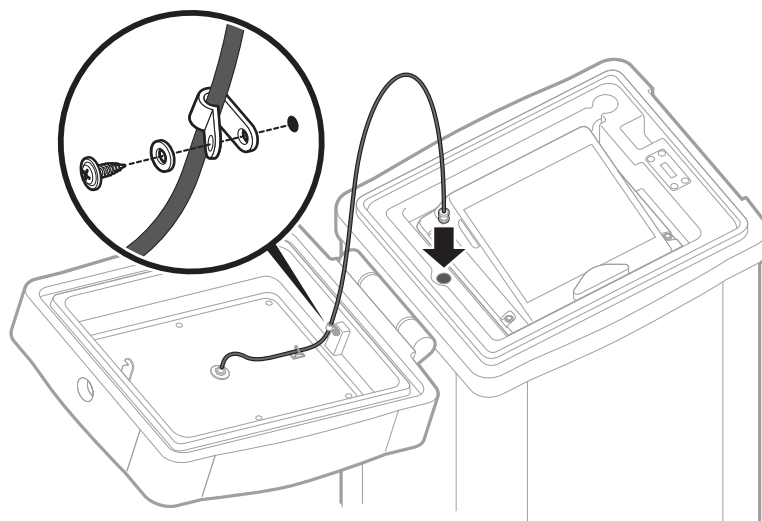

6

