Published on *Hunter Industries* (http://www.hunterindustries.com)

Products: I-Core® [1]
Topics:

- FAQs, Installation Procedures, Troubleshooting

Steps to replace the front panel on a I-Core controller:

STEP ONE

[2]

Turn controller power off!

STEP TWO

[3]

With the controller's power off, open the face panel's door (similar to how the front door of the controller was opened).

STEP THREE

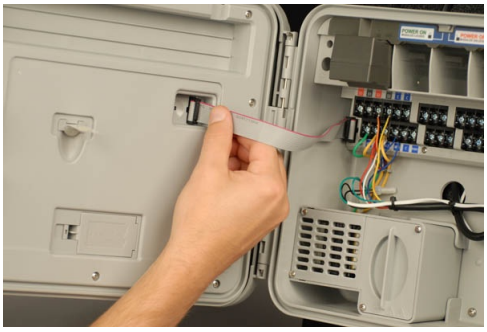
[4]

Once the front panel's door is open, locate the grey ribbon cable in the top right corner on the back of the face panel.

STEP FOUR

[5]

Carefully unplug the ribbon cable by pulling out on the black plastic plug.

STEP FIVE

STEP SIX

[6]

Press the tab release on the back of the face panel door to the left to release the panel from the frame.

[7]

With the tab release pressed, the face panel can be removed from the door frame.

STEP SEVEN

[8]

To install the new panel simply reverse this process.

Resources

[9]

I-CORE OWNER'S MANUAL

[9]

Rate this Article:

-
  -
  -
  -
  -
  -
  -
  -
-
  -
  -
  -

Resources
Product Catalog and Parts List
Video Library
Document Library
Site Study Library
Online Training
Hunter Promo Store
Tools Store
Support Library
Homeowner Support
International Shipping
Warranty

- Contact Us
- Corporate
  - Great Ideas Open Innovation
  - Careers
  - Conservation
  - Social Responsibility Report
  - California Supply Chains Act
- Hunter Family of Companies
  - FXL Lighting
  - Hunter Custom Manufacturing

' + 'ipt>'); //-->

Source URL (retrieved on *11/29/2015 - 19:17*): http://www.hunterindustries.com/support/how-do-i-replace-front-panel-my-i-core-controller

Links:
[1] http://www.hunterindustries.com/irrigation-product/controllers/i-corer
[2] http://www.hunterindustries.com/sites/default/files/ts_icore_1.jpg
[3] http://www.hunterindustries.com/sites/default/files/ts_icore_2.jpg
[4] http://www.hunterindustries.com/sites/default/files/ts_icore_3.jpg
[5] http://www.hunterindustries.com/sites/default/files/ts_icore_4.jpg
[6] http://www.hunterindustries.com/sites/default/files/ts_icore_5.jpg
[7] http://www.hunterindustries.com/sites/default/files/ts_icore_6.jpg
[8] http://www.hunterindustries.com/sites/default/files/ts_icore_7.jpg
[9] http://www.hunterindustries.com/sites/default/files/OM_ICORE_Dom.pdf
[10] http://www.hunterindustries.com/sites/default/files/OM_ICORE_em.pdf
[11] http://www.hunterindustries.com/sites/default/files/OM_ICore_SP.pdf
[12] http://www.hunterindustries.com/sites/default/files/OM_ICore_IT.pdf
[13] http://www.hunterindustries.com/sites/default/files/OM_ICore_FR.pdf
[14] http://www.hunterindustries.com/sites/default/files/OM_ICore_PT.pdf
[15] http://www.hunterindustries.com/sites/default/files/OM_ICore_GR.pdf
[16] http://www.hunterindustries.com/sites/default/files/om_icore_tr.pdf
[17] http://www.hunterindustries.com/sites/default/files/om_icore_po.pdf
[18] http://www.hunterindustries.com/global