Published on *Hunter Industries* (http://www.hunterindustries.com)

Оборудование: X-Core [1]
Темы: FAQs, Процедуры установки

Both the XC and X-Core controller are equipped with a delay between stations feature. This feature allows the user to select a time delay between the end of one station run time and the start of another station's run time. The delay can be as short as a few seconds or up to several hours. The delay is a convenient feature when working with slow closing valves or slow well water recovery.

Programmable Delay Between Stations

1. Start with the dial in the **RUN** position.
2. Press and hold the ▬ button down while turning the dial to the **RUN TIMES** position.
3. Release the ▬ button. At this point the display will show a delay time for all stations in seconds, which will be flashing.
4. Press the ✚ or ▬ buttons to increase or decrease the delay time between 0 and 4 hours.
5. Return the dial to the RUN position.

Note: The minutes option will not appear until 59 seconds is passed with the ✚ button, "hr" will appear indicating the minutes duration.

Resources

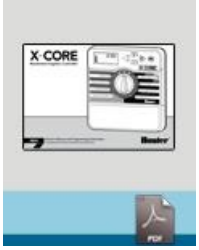

[2]
X-CORE OWNER'S MANUAL
[2]

[13]
XC HYBRID OWNER'S MANUAL
[13]

Rate this Article:

No votes yet

Похожие ссылки

Source URL (retrieved on *04/05/2015 - 16:15*): http://www.hunterindustries.com/ru/support/how-do-i-program-or-remove-delay-between-stations-my-xc-or-x-core-controller

Links:
[1] http://www.hunterindustries.com/ru/product/pulty-upravleniya/x-core
[2] http://www.hunterindustries.com/sites/default/files/OM_XCORE_Dom.pdf
[3] http://www.hunterindustries.com/sites/default/files/OM_XCORE_EM.pdf
[4] http://www.hunterindustries.com/sites/default/files/OM_XCORE_SP.pdf
[5] http://www.hunterindustries.com/sites/default/files/OM_XCORE_IT.pdf
[6] http://www.hunterindustries.com/sites/default/files/OM_XCORE_FR.pdf
[7] http://www.hunterindustries.com/sites/default/files/OM_XCORE_PT.pdf
[8] http://www.hunterindustries.com/sites/default/files/OM_XCORE_GR.pdf
[9] http://www.hunterindustries.com/sites/default/files/OM_XCORE_TK.pdf
[10] http://www.hunterindustries.com/sites/default/files/om_xcore_ar.pdf
[11] http://www.hunterindustries.com/sites/default/files/om_xcore_he.pdf

[12] http://www.hunterindustries.com/ru
[13] http://www.hunterindustries.com/sites/default/files/OM_XCH_DOM.pdf
[14] http://www.hunterindustries.com/sites/default/files/OM_XCH_SP.pdf
[15] http://www.hunterindustries.com/sites/default/files/OM_XCH_IT.pdf
[16] http://www.hunterindustries.com/sites/default/files/OM_XCH_FR.pdf
[17] http://www.hunterindustries.com/sites/default/files/OM_XCH_PT.pdf
[18] http://www.hunterindustries.com/sites/default/files/OM_XCH_GR.pdf